


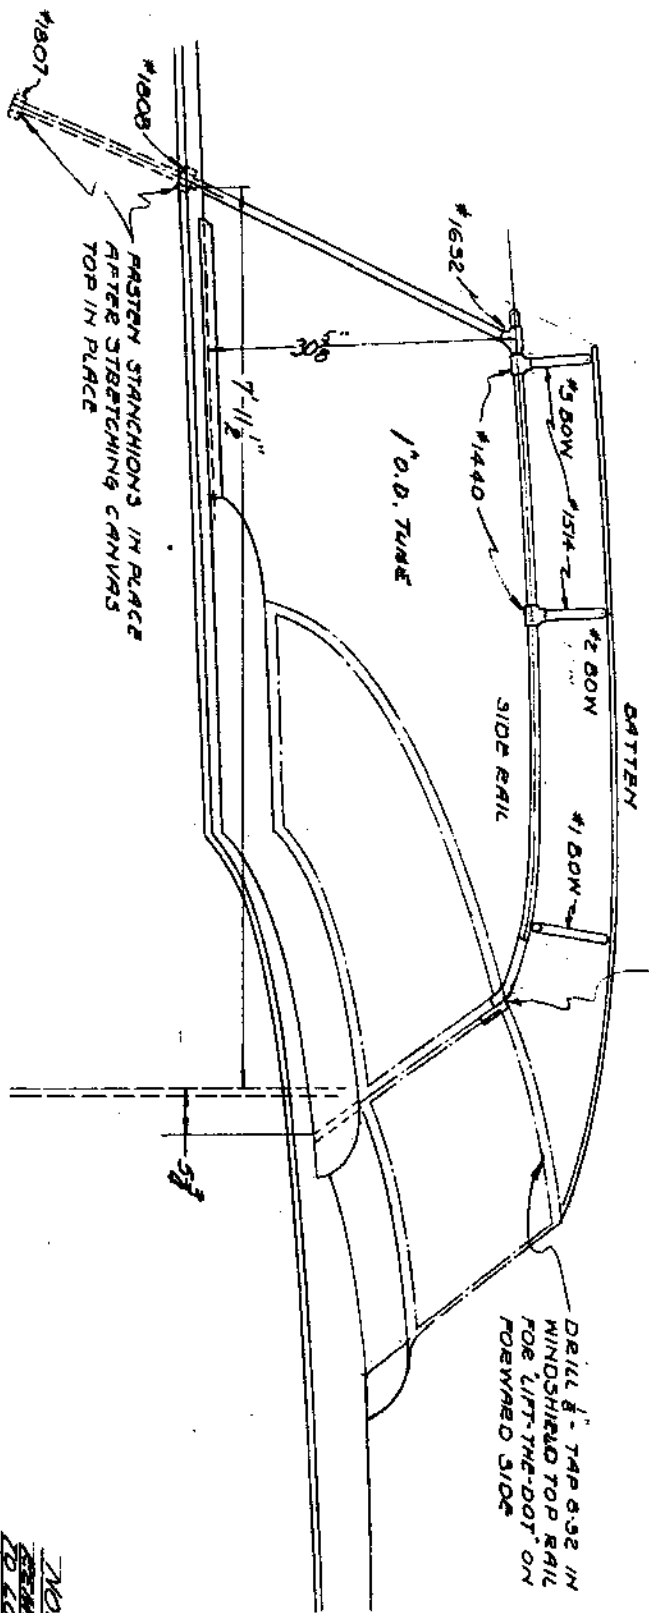

FASTEN STANCHIONS IN PLACE AFTER STRETCHING CANVAS TOP IN PLACE

NOTE: BEFORE YOU TO LOCATE THE LIFT-THE-DOOR TO THE WINDSHIELD TOP RAIL ON THE FORWARD SIDE OF THE BOAT. IT WILL BE NEARLY 4'-6" FROM THE FORWARD END OF THE BOAT.

